





In order to remove the PW-200 you must release the power connector latch and then pull up the unit. In case the latch is not accessible, insert a thin long rod into the hole and push the rod, against the latch.

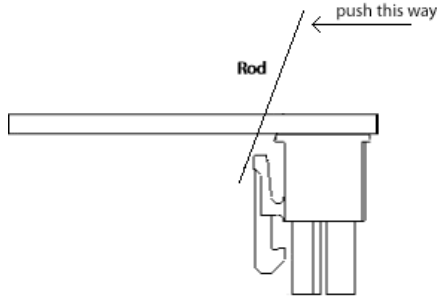


Fig 1.0, releasing the connector latch


**Specifications, PW-200-M, PW-200-V**

Power Ratings (Max Power = 205 Watts, peak 250watts)

Volts (V)	Max Load (A)	Peak Load (A)	Regulation %
5V	6A	10A	+/- 1.5%
5VSB	2A	10A	+/- 1.5%
3.3V	6A	10A	+/- 1.5%
-12V	0.1A	0.2A	+/- 5%
12V	12A	13.5A	Switched input

12V input tolerance = 11V – 14V, 11-16V can be achieved with a simple trace cut. Consult the website for more information. Warranty is void after this alteration.

**Efficiency Ratings**

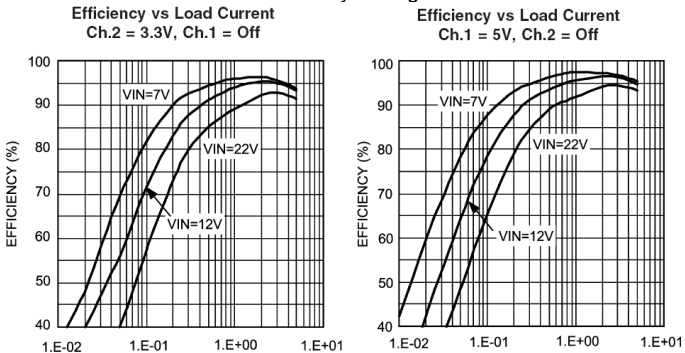

**Size**

